


CONTOUR HINGE™ MONOPOSTO ASSEMBLY


STEP 1

UNFOLD THE CARRIER BY INSERTING A **HIGH TENSION DRUM KEY** INTO THE **CONTOUR HINGE™ (C)** AND ROTATE A DRUM KEY COUNTERCLOCKWISE UNTIL THE CARRIER IS FULLY FLEXIBLE. REMOVE THE **COMFORT AIR™ CUSHION (A)** FROM THE CARRIER'S BACK BAR.

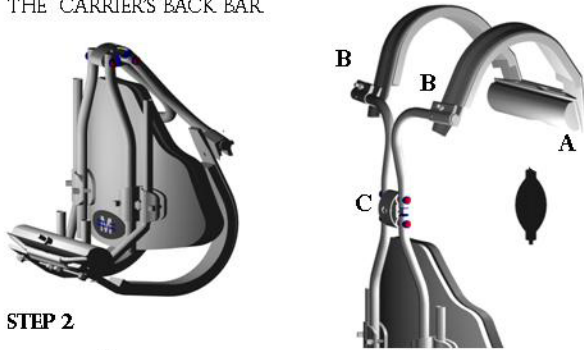

STEP 2

LOOSEN THE SHOULDER CLAMPS **(B)** WITH THE DRUM KEY. HANG THE CARRIER FROM A TABLE **MAKING SURE ALL FOUR POINTS OF THE SHOULDERS AND BACK BAR ARE TOUCHING THE SURFACE OF THE TABLE AND ALIGN THE CARRIER VERTICALLY AND PARALLEL TO THE TABLE LEG AS SHOWN BELOW. MAKE SURE ALL FOUR POINTS OF THE SHOULDERS AND BACK BAR ARE STILL TOUCHING THE SURFACE OF THE TABLE THEN SECURE THE CARRIER BY RETIGHTENING THE SHOULDER CLAMPS **(B)** AND THE **CONTOUR HINGE™ (C)** UNTIL THE CARRIER IS NO LONGER FLEXIBLE.**

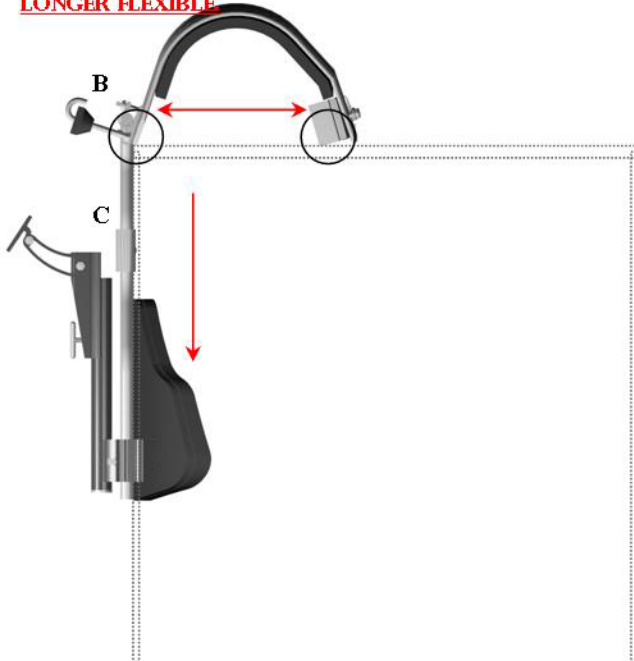


MAY TUBULAR VESTS, CONTOUR HINGE AND MONOPOSTO CARRIERS ARE COVERED UNDER THE VARIOUS U.S. PATENTS INCLUDING BUT NOT RESTRICTED TO 6,223,407 6,229,583 B1 5,691,492 6,024,257 6,172,290 B1 6,681,886 B2 & 6,403,869 B2 PLUS OTHER U.S. AND FOREIGN PATENTS PENDING.



CONTOUR HINGE™ MONOPOSTO

Instructions for Assembly & Custom Fit

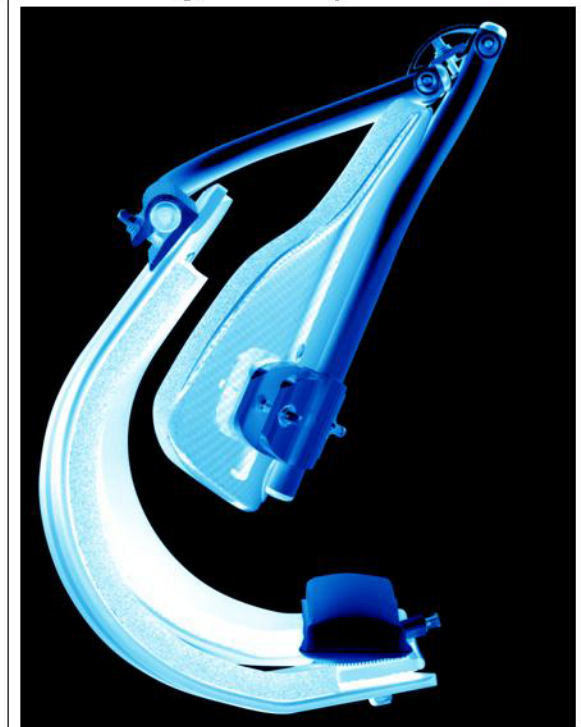

MAY TUBULAR TECHNOLOGY